

EZDVD2TM

**DVD Duplicator System
User's Manual**

CalOptic Copyright 2003

Copyright and Trademarks Information

The information in this manual is subject to change without prior notice and does not represent a commitment on the part of CalOptic, who assumes no liability or responsibility for any errors that may appear in this manual.

EZCD2™, EZDVD2™ are trademarks of CalOptic, IBM is a trademark of the International Business Machine Corporation. Apple and the PowerMac Logo are registered trademarks of Apple Corporation. All brand names and trademarks are properties of their respective owners.

This manual contains materials protected under International Copyright Laws. All rights reserved. No part of this manual may be reproduced, transmitted or transcribed without the expressed written permission of the manufacturer and authors of this manual.

CalOptic is used only for backing personal data and editing personal audio tracks. Violation of Copyright is a criminal charge. CalOptic does not support any illegal recording and is not responsible for the illegal actions of the users.

Chapter 1 Introduction

The EZDVD2 Pro DVD Duplicator is a standalone. This model is designed for copying DVD in video, audio or data form.

With the EZDVD2 Pro Duplicator, copying will become easy and efficient. Professional mechanism design, multifunctional LCD and 4 simple buttons on the panel all make the four models easy to operate. For any end-user they are really cost-effective products.

1.1 Features

- Standalone DVD Duplicator
- Power-on self test.
- Support Hard Disk Drive (Optional).
- Automatic format detection.
- User-friendly interface with LCD messages.
- Fast copying on high-speed DVD writers
- Easy operation without installing software and extra training.
- Firmware update through DVD-ROM.

Chapter 2 Basic Instructions

2.1 Buttons and LCD

There are four buttons and an LCD on the panel of the copy smart plus. They are described as follows.



1. **LCD Display:** shows all functions and messages.
2. **Up Arrow:** used to scroll up through functions or menus.
3. **Down Arrow:** used to scroll down through functions or menus.
4. **ENTER Button:** used to execute a selected function.
5. **ESCAPE Button:** used to cancel a selected function.

After you power on and the copy smart plus detects installed hardware like DVDRAM, DVD writers, it will execute a self-test for seconds. When the self-test is completed, the LCD will show the following messages below.

1.

Initialize SDRAM

2.


**DVD Duplicator
1-3 ver: 2.03K**

Figure 1 represents the EZDVD2-3 and EZDVD2-7. The firmware version for EZDVD2-3 is 2.03S and that for the EZDVD2-7 is 2.032. The figures below will be displayed after the system self-test.

3.



4.

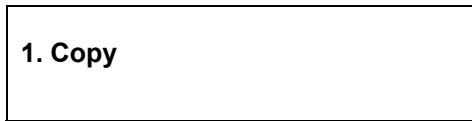

There are 12 main functions. Function 1 is Copy. You can press ▼ to select the other functions.

2.2 About Hard Disk Drive Installation

A hard disk drive is not necessary, but with a hard disk drive you will be able to use the function **Image**. In other words, you have one more option to reproduce a DVD from an image file stored in the hard disk drive. In the next 2 sections (subsection 3.2.1 and 3.2.2) we are going to describe the differences of having a 3.5" hard disk and not having one.

2.2.1 With a Hard Disk Drive

If you have a hard disk drive in your EZDVD2 DVD Duplicator, the operation procedures will be as follows.

- Once your EZDVD2 DVD Duplicator detects the hard disk drive, the system will ask if you want to format it or not. A 10GB hard disk drive can be divided into 2 partitions, each partition has a 5GB capacity.
- Use function 8 (Select Source) to set the hard disk drive as the source.
- In function 9 (Image) to select a partition to store the data.
- If there is no data in a selected partition, place a source DVD into DVDROM and use function 9-01 (Load) to transfer the data from the DVD into the selected partition by pressing **ENT**. Different DVD images can be stored in different partitions.
- There are 12 main functions to select from. Function 1 is Copy. You can press ▼ to select other functions.
- Switch back to function 1 (Copy) by pressing ▲.
- Place blank DVD discs into the DVD writers and press **ENT** to start copying.
- When copying is completed, the successfully recorded DVDs will eject automatically. The default setting is set to eject automatically, but can be changed.
- The failed DVDs will remain in the writers. The default setting is set to keep failed DVDs in the writers, but also can be changed. To remove the failed DVDs, press the eject button on the writers.
- During copy operation, do not press any of the buttons on the EZDVD2 Duplicator or it may cause damage to the controller and the DVDs will be damaged.

2.2.2 Without a Hard Disk Drive

If you don't have a hard disk drive in EZDVD2 DVD Duplicator, the operation procedures will be as follows.

- Place a source DVD into DVD-ROM.
- Switch to function 1 (Copy) by pressing ▲. Place blank DVD discs into the DVD writers, and press **ENT** to start copying.
- When copying is completed, the passed DVDs will eject automatically. The default setting is set to eject automatically, but can be changed.
- The failed DVDs will remain in the writers. The default setting is set to keep failed DVDs in the writers, but also can be changed. To remove the failed DVDs, press the eject button on the writers.

Chapter 3 Functions

There are 12 functions: Copy, Test, Test & Copy, Verify, Compare, Prescan, Disc Info, Select Source, Image, Edit Track, Setup and Advanced Setup. Among the 12 functions, Edit Track is designed exclusively for editing a collection of favorite songs from CDs. If you do not understand an LCD message, you can see Appendix 2.

3.1 Copy

Function 1 (Copy) is to copy data from a source DVD directly into blank DVD discs. Before copying, be sure that the source DVD is placed onto DVD-ROM, or there is an image in the hard disk drive partition (if you have installed a hard disk). If you are not so sure of real copying, you can use Function 2 (Test) to simulate first.

Select function 1 (Copy), put a source DVD into the DVD-ROM and blank DVD discs onto the DVD writers. DVD rewriteable discs containing old data are also usable.



1. Copy

After the DVD-ROM and DVD writers detect DVDs, press **ENT** to start copying. LCD will show the copying information as follows.



Copying- DVD 0%
4213.4MB d:20:15

When copying is in progress, MB and time will decrease whereas the percentage of completion increases.

When copying comes to an end, LCD will show the results as follows. The passed DVDs will eject automatically.



1.Copy
OK: 03

3.2 Test

Function 2 Test is to simulate the copying progress. When simulation finishes, there will be no data really written into DVD discs.

Select function 2. Put a source DVD onto DVD-ROM and blank DVD discs onto the DVD writers.



2. Test

Press **ENT** to start simulation. If you use DVD rewriteable discs that contain data, the old data will be quickly erased before simulation as shown below.

Erasing disc

LCD will show the testing information as follows.

**Testing- DVD 0%
4213.4MB d:20:15**

When the test comes to an end, LCD will show the results as follows.

**2.Test
OK: 03**

Stopping the test halfway does not affect the DVD discs, but if the DVD-rewriteable discs contain important data, they may be destroyed.

3.3 Test & Copy

Function 3 Test & Copy is to test first and then copy actually.

Select function 3. Put a source DVD onto DVD-ROM and blank DVD discs onto the DVD writers.

3.Test & Copy

Press **ENT** to start simulation. LCD will show the testing information as follows.

**Testing- DVD 0%
4213.4MB d:20:15**

When the test finishes, actual copying will begin as shown below.

**Copying- DVD 0%
4213.4MB d:20:15**

When the whole process finishes, LCD will show the results as follows.

3.Test & Copy
OK: 03

3.4 Verify

Function 4 Verify is to examine if the target DVDs can be read correctly after copying.

Select function 4.

4.Verify

Press **ENT** to verify. LCD will show the verification information as follows.

Verify- DVD 0%
4213.4MB 2:29:14

When verification comes to an end, LCD will show the results as follows.

4.Verify
OK: 03

3.5 Compare

Function 5 Compare is to make a comparison between the source DVD and the target DVDs after copying.

Select function 5. Put the source DVD onto DVD-ROM and the target DVDs onto DVD writers.

5.Compare

Press **ENT** to compare. LCD will show the comparison information as follows.

Compare- DVD 0%
4213.4MB 1:05:06

When comparison comes to an end, LCD will show the results as follows.

Compare OK: 3
Fail: 0 Diff: 0

Press **ENT** to see the details of source 1 as shown below.

Src: 01 DVD-ROM
Total: 4213.4MB

Press **ENT** to see the details of source 2. If the comparison is identical, LCD will show the message as follows.

Src: 02 DVD-RW
Identical

If comparison fails, LCD will show the failure. By pressing **ENT** twice, LCD will show that the contents of source 1 and those of source 2 do not match as follows.

Src: 02 DVD-RW
TOC not match

3.6 Prescan

Function 6 Prescan is to scan if the source DVD can be read correctly, and by the way to test the reading speed.

Select function 6. Put the source DVD onto DVD-ROM.

6.Prescan

Press **ENT** to prescan. LCD will show the scanning information as follows.

Scanning- DVD 0%
4213.4MB 40:40

When scanning finishes and the source DVD can be read correctly, LCD will show the results as follows.

PreScan OK!

3.7 Disc Info

Function 7 Disc Info is to show the basic information of source DVD.
Select function 7. Put the source DVD onto DVD-ROM.

7.Disc Info

Press **ENT**, and LCD will show the DVD information as follows.

**Disc Type: DVD-ROM
Capacity: 4213.4MB**

3.8 Select Source

Function 8 Select Source is to let you select the data on DVD-ROM, DVD writers or HDD as the source from which copying will be done.

Select function 8.

8.Select Source

Press **ENT**, and then press **▲ ▼** to select the source as shown below.

**Src: DVD-ROM
01 IDE1 Master**

After selecting the source such as DVD-ROM, you can press **ENT**, and LCD will show the message as follows.

DVD-ROM selected!

Suppose you select HDD as the source and try to copy from one of its partitions, but the partition contains no data, an error message will appear on LCD. At this moment, you can switch to another partition that contains data, or use function 9 Image to load the data into the chosen partition first.

3.9 Image

Function 9 Image is valid only when you have installed a hard disk. This function includes 6 parts. They are Load, Delete Image, Image Info, Compare Image, Select Partition and Select Src Drive. The loaded data is called an image file.

Select function 9.



9.Image

3.9.1 Load

On the above figure press **ENT**, and you will enter the following figure. Here the function Load is to let you load data from DVD-ROM or any one of the DVD writers into the current partition of the hard disk. P:A means partition A.



9-01.Image P: A
Load

Press **ENT** to load. LCD will show the loading information as follows.



Load- A - DVD 0%
4213.4MB d:20:15

After the image file is successfully loaded, LCD will show the results as follows.



Image load OK

If there is an image file existing in the current partition, the system will ask you whether to overwrite it or not. Please use ▲ ▼ to confirm Yes or No.



Image Exists
Overwrite? Yes

3.9.2 Delete Image

If you want to empty an image file stored in a particular partition, you can use the function Delete Image to do so. First, select the function by pressing ▼.

**9-02. Image P: A
Delete Image**

The system will ask if you are sure to delete. Use ▲ ▼ to confirm Yes or No.

**Delete Image in
Partition A? Yes**

After the image file is deleted, LCD will show the results as follows.

**Partition A:
Image is deleted**

3.9.3 Image Info

This function is to show the basic information of an image file stored in a particular partition. First, select the function by pressing ▼.

**9-03. Image P: A
Image Info**

Press **ENT**, and LCD will show the information of the image file as follows.

**Disc Type: DVD-ROM
Capacity: 4213.4MB**

3.9.4 Compare Image

This function is to compare the contents of the source DVD and those of the image file in the partition. First, select the function by pressing ▼.

**9-04. Image P: A
Compare Image**

Press **ENT**, and LCD will show the comparison information as follows.

Compare- DVD 0%
4213.4MB 1:05:06

When comparison comes to an end, LCD will show the results as follows.

Compare OK: 1
Fail: 0 Diff: 0

Press **ENT** to see the details of source 1 as shown below.

Src: 01 DVD-ROM
Total: 4213.4MB

Press **ENT** to see the details of source 2. If the comparison is identical, LCD will show the message as follows.

Tgt: 00 HDD P: A
Identical

If comparison fails, LCD will show the failure. By pressing **ENT** twice, LCD will show that the contents of source 1 and those of source 0 do not match as follows.

Tgt: 00 HDD P: A
TOC not match

3.9.5 Select Partition

This function is to select a partition in the hard disk. First, select the function by pressing ▼.

9-05.Image P: A
Select Partition

After installing a hard disk, your copy smart plus will format it automatically. Each partition will occupy 5GB. The number of partitions is dependent on the hard disk's capacity. The partitions are alphabetically arranged. Now select a working partition by pressing ▲ ▼, and LCD will show the message as follows.

**Select Working
Partition - A**

After the partition is selected, LCD will show the results as follows.

**Set Partition to
A**

3.9.6 Select Src Drive

This function is to select DVD-ROM or any of the DVD writers as the source from which you can load data into a particular partition as an image file.

First, select the function by pressing ▼.

**9-06. Image P: A
Image Src Drive**

Then use ▲▼ to select DVD-ROM or any of the DVD writers as the source.

**Select Img Src:
01 IDE1 DVD-ROM**

After selecting the source such as DVD-ROM, you can press **ENT**, and LCD will show the message as follows.

**Load image from
Drive ID-01**

3.10 Edit Track (for CD only)

Function 10 Edit Track is exclusively designed for editing a collection of favorite songs from CDs. In other words, it can collect different tracks (songs) on a number of CDs and merge them into a single CD. This function includes 4 parts. They are CD to CD, CD to HDD, Play Audio Track and Close Session.

Select function 10.

10. Edit Track

3.10.1 CD to CD

On the above figure press **ENT**, and you will enter the following figure. Here the function CD to CD is to let you select a track or more from CD-ROM, and then copy into blank CD-R/RWs.

**10-01. Edit Track
CD to CD Edit**

On the above figure press **ENT**, and you will enter the following figure. Here 1/10 means the number one of the 10 tracks, and 03:25 means the playing time.

**Select Track:
1/10 03:25**

You can press ▼ to see the second track and so on. Suppose we decide to select the first track. You select it by pressing **ENT**. A “+” will appear beside 1/10 as shown below. But pressing **ENT** again may cancel the selection.

**Select Track:
+1/10 03:25**

After selecting, please use ▲ to move to the “End” menu as shown below.

**Select Track:
End 1Trk03:25**

Press **ENT** to finish the CD editing, and use **▲ ▼** to confirm Yes or No.

**End edit disc
and burn? Yes**

LCD will show the copying information as follows.

**Copying- 24X Edit
1/10 - > 1/1**

On the above figure 1/1 means the first track of all tracks we have selected, and here we have just selected one track. When copying comes to an end, LCD will show the message as follows.

**Burn Complete!
OK: 03**

The system will ask if you want to keep editing. Please use **▲▼** to confirm Yes or No. as shown below.

**Continue edit
next Disc? Yes**

If you want to keep editing, the current source CD will eject automatically, and the system will ask you to insert another new CD as shown below.

Insert next disc

After inserting the new CD, press **ENT** to edit as before. Suppose we decide to select the second track. You select it by pressing **ENT**. A "+" will appear beside 2/10 as shown below.

**Select Track:
+2/10 04:25**

After selecting, please use s to move to the “End” menu as shown below.

**Select Track:
End 1Trk04:25**

Press **ENT** to finish the CD editing, and use ▲ ▼ to confirm Yes or No.

**End edit disc
and burn? Yes**

LCD will show the copying information as follows.

**Copying- 24X Edit
2/10 - > 2/2**

On the above figure 2/2 means the second track of all tracks we have selected, and so far we have selected two tracks from two different CDs. When copying comes to an end, LCD will show the message as follows.

**Burn Complete!
OK: 03**

The system will ask if you want to keep editing. Suppose we don't like to continue, then press ▼ to confirm No.

**Continue edit
next Disc? No**

On the above figure Press **ENT**. The system will ask if you want to close all CDs' sessions. Please use ▲ ▼ to confirm Yes or No as shown below.

**Close all disc's
session? Yes**

After deciding to close, LCD will show the message as follows.

**Closing Session
Please wait---**

3.10.2 CD to HDD

After closing sessions, press **ESC** and **▼** to enter the following figure. Here the function CD to HDD is to let you select a track or more from CD-ROM, and then copy into a certain partition of HDD.

**10-02. Edit Track
CD to HDD Edit**

On the above figure press **ENT**, and you will enter the following figure. Here 1/10 means the number one of the 10 tracks, and 03:25 means the playing time.

**Select Track:
1/10 03:25**

Suppose we decide to select the first track. You select it by pressing **ENT**. A "+" will appear beside 1/10 as shown below. But pressing **ENT** again may cancel the selection.

**Select Track:
+1/10 03:25**

After selecting, please use **▲** to move to the "End" menu as shown below.

**Select Track:
End 1Trk03:25**

Press **ENT** to finish the CD editing, and use **▲▼** to confirm Yes or No.

**End edit disc
and burn? Yes**

Then, the track as an image file will be loaded into HDD. LCD will show the loading information as follows.

Load- P0 -24X Edit
1/10 - > 1/1

When loading comes to an end, LCD will show the message as follows.

Image load OK

The system will ask if you want to keep editing. Please use ▲▼ to confirm Yes or No. as shown below.

Continue edit
next Disc? Yes

If you want to keep editing, the current source CD will eject automatically, and the system will ask you to insert another new CD as shown below.

Insert next disc

After inserting the new CD, press **ENT** to edit as before. Suppose we select the second track. You select it by pressing **ENT**. A "+" will appear beside 2/10 as shown below.

Select Track:
+2/10 04:25

After selecting, please use ▲ to move to the "End" menu as shown below.

Select Track:
+2/10 04:25

Press **ENT** to finish the CD editing, and use ▲▼ to confirm Yes or No.

End edit disc
and burn? Yes

Then, the track as an image file will be loaded into HDD. LCD will show the loading information as follows.

Load- P0 -24X Edit
2/10 - > 2/2

When loading comes to an end, LCD will show the message as follows.

Image load OK

The system will ask if you want to keep editing. This time please use ▼ to confirm No as shown below.

Continue edit
next Disc? No

Then, the system will ask if you want to burn from HDD into CD-R/RW or move into a partition. Please use ▲ to confirm Burn as shown below.

Burn or Move to
partition? Burn

After pressing ▲, LCD will show the copying information as follows.

Copy- P0 -24X 0%
1/2 Trk03:25

When burning finishes, LCD will show the results as follows.

Burn Complete !
OK: 03

On the above figure press **ESC** to enter the following figure. Now press **▼** to move the data from HDD template into a certain partition.

**Burn or Move to
partition? Move**

After pressing **▼**, you need to select a partition into which the data will be moved. Suppose we select A as shown below.

**Select Partition
A**

After pressing **ENT**, LCD will show the moving information as follows.

**Moving to P: A
0%**

When moving is completed, the LCD will show the results as follows.

**Moving to P: A
OK!**

If the chosen partition has contained image data, the system will ask to overwrite or keep the data. Here please use **▲** to overwrite.

**Image Exists
Overwrite? Yes**

After pressing **▲**, LCD will show the moving information as follows.

**Moving to P: A
0%**

When moving is completed, the LCD will show the results as follows.

A rectangular box representing an LCD screen. Inside, the text reads "Moving to P: A" on the first line and "OK!" on the second line, both in a bold, black, sans-serif font.

3.10.3 Play Audio Track

This function is to make the copy smart plus act as a music player. You can plug an AV terminal in the audio port on the back of the device, and enjoy the music.

On the above figure, press **ESC** and ▼ to select the function.

A rectangular box representing an LCD screen. Inside, the text reads "10-03. Edit Track" on the first line and "Play Audio Track" on the second line, both in a bold, black, sans-serif font.

Use ▲▼ to select the track you want to play.

A rectangular box representing an LCD screen. Inside, the text reads "Select Track:" on the first line and "1/10 03:25" on the second line, both in a bold, black, sans-serif font.

After selecting and pressing **ENT**, LCD will show the playing information below.

A rectangular box representing an LCD screen. Inside, the text reads "Playing Track-1" on the first line and "00:00 / 03:25" on the second line, both in a bold, black, sans-serif font.

3.10.4 Close Session

This function is to close CDs and let no data written into. After closing, you can put the CDs on any normal player and listen.

On the above figure press **ESC** and ▼ to select the function.

A rectangular box representing an LCD screen. Inside, the text reads "10-04. Edit Track" on the first line and "Close Session" on the second line, both in a bold, black, sans-serif font.

After pressing **ENT**, the system will ask if you are sure to close.

**Close all disc's
session? Yes**

After pressing **ENT**, LCD will show the message as follows.

**Closing Session
Please wait---**

When closing finishes, LCD will show the results as follows.

**Closing Complete
OK :3 Fail :0**

3.11 Setup

Function 11 Setup lets you change the default settings. Once you change a setting, remember to press **ENT** to save it. However, it is suggested to use the defaults for the optimal operation. This function includes 16 parts. They are Language, Burn Speed, Read Speed, Auto Start Drive, Startup Menu, Auto Verify, Auto Compare, Auto Prescan, Eject Disc, Burn On The Fly, Burn Mode, Button Sound, Device Info, System Info, Quick Erase and Full Erase.

Select function 11.

11. Setup

3.11.1 Language

On the above figure press **ENT**, and you will enter the following figure. The function Language lets you select a language in which messages can be shown on LCD.

**11-01. Setup
Language**

Press **ENT** to enter the following figure. Here LCD only supports English.

Language
English

3.11.2 Burn Speed

On the above figure, press **ESC** and ▼ to enter the following figure. The function Burn Speed lets you control the burning speed of DVD writers.

11-02. Setup
Burn Speed

Press **ENT** to enter the following figure. The default is set to **MAXIMUM**, but you are able to change it to your preference such as: 8X, 4X, 2X and 1X.

Burn Speed
Maximum

3.11.3 Read Speed

On the above figure, press **ESC** and ▼ to enter the following figure. The function Read Speed lets you control the reading speed of target DVDs.

11-03. Setup
Read Speed

Press **ENT** to enter the following figure. The default is **MAXIMUM**, but you are able to change it to your preference such as: 32X, 16X and 8X.

Read Speed
Maximum

3.11.4 Auto Start Drive

On the above figure, press **ESC** and ▼ to enter the following figure. Auto Start Drive is to copy or test automatically once you put blank DVDs onto the writers.

**11-04. Setup
Auto Start Drive**

Press **ENT** to enter the following figure. The default setting is Off. Press ▼ to select 1 (one blank DVD).

**Auto Start Drive
Off**

3.11.5 Startup Menu

On the above figure, press **ESC** and ▼ to enter the following figure. Startup Menu lets you select any one of the functions except Adv Setup as the first item appearing on the menu whenever you turn on the copy smart plus.

**11-05. Setup
Startup Menu**

Press **ENT** to enter the following figure. The default is Copy. Of course you can select any other function as the first item, but remember to press **ENT**.

**Startup Menu
1.Copy**

3.11.6 Auto Verify

On the above figure, press **ESC** and ▼ to enter the following figure. Auto Verify is to verify automatically if the target DVDs can be read after copying.

**11-06. Setup
Auto Verify**

Press **ENT** to enter the following figure. The default is Off. Press ▼ to select On.

Auto Verify
Off

3.11.7 Auto Compare

On the above figure, press **ESC** and ▼ to enter the following figure. Auto Compare is to compare automatically the source DVD and the target DVDs after copying.

11-07. Setup
Auto Compare

Press **ENT** to enter the following figure. The default is Off. Press ▼ to select On.

Auto Compare
Off

3.11.8 Auto Prescan

On the above figure, press **ESC** and ▼ to enter the following figure. Auto Prescan is to scan automatically if the source DVD can be read correctly, and by the way to test the reading speed.

11-08. Setup
Auto Prescan

Press **ENT** to enter the following figure. The default is Off. Press ▼ to select On.

Auto Prescan
Off

3.11.9 Eject Disc

On the above figure, press **ESC** and ▼ to enter the following figure. Eject Disc provides three choices. They are Eject Good Only, Eject All Disc, and Do Not Eject. Eject Good Only means that the DVDs will eject automatically only when they are copied successfully. Eject All Disc means that the DVDs will eject automatically whether they are copied successfully or not. Do Not Eject means that you need to eject the DVDs manually when copying finishes.

**11-09. Setup
Eject Disc**

Press **ENT** to enter the following figure. The default is Eject Good Only. Press ▼ to select Eject All Disc or Do Not Eject.

**Eject Disc
Eject Good Only**

3.11.10 Burn On The Fly

On the above figure, press **ESC** and ▼ to enter the following figure. Burn On The Fly lets you control the copying methods. When the setting is On, the data will be copied directly from the source DVD to the target DVDs. When the setting is Off, the data will be loaded into a partition of HDD first, and hence copying will be done.

**11-10. Setup
Burn On The Fly**

Press **ENT** to enter the following figure. The default is On. Press ▼ to select Off.


**Burn On The Fly
On**

If your copy smart plus doesn't connect with a hard disk, LCD will show the message as follows.

No Valid HDD !

3.11.11 Burn Mode

On the above figure press **ESC** to return to Function 11, and then select part 11 Burn Mode as the following figure shows. Burn Mode lets you control the burning modes. There are two modes: DAO (Disc At Once) and TAO (Track At Once). They only support CD. If the DVD writer doesn't support the mode you have selected, the copy smart plus will automatically switch to the other mode.



**11-11. Setup
Burn Mode**

Press **ENT** to enter the next figure. The default is DAO. Press ▼ to select TAO.



**Burn Mode
DAO**

3.11.12 Button Sound

On the above figure, press **ESC** and ▼ to enter the following figure. Button Sound lets you control the sound of a button when you press it.



**11-12. Setup
Button Sound**

Press **ENT** to enter the next figure. The default is On. Press ▼ to select Off.



**Button Sound
On**

3.11.13 Device Info

On the above figure, press **ESC** and ▼ to enter the following figure. Device Info shows the information of the DVD-ROM and any of the DVD writers you have installed.



**11-13. Setup
Device Info**

Press **ENT** to enter the next figure.

**01 IDE1 Master
DVD-ROM : PIONEER**

Press **ENT** to enter the next figure.

**DVD-ROM DVD-116
1.22**

Press **▼** twice to enter the next figure.

**02 IDE2 Master
DVD-RW : PIONEER**

Press **ENT** to enter the next figure.

**DVD-RW DVR-103
1.80**

3.11.14 System Info

On the above figure, press **ESC** and **▼** to enter the following figure. System Info shows the information of the system.

**11-14. Setup
System Info**

Press **ENT** to enter the next figure. Ver.2.03S is for 1-7 and Ver.2.03X for 1-14.

**DVD Duplicator
1-3 ver: 2.03K**

Press **ENT** to enter the next figure.

**WINBOND: W29C040
2002 / 5 / 27 ACARD**

3.11.15 Quick Erase

On the above figure, press **ESC** and **▼** to enter the following figure. Quick Erase is to erase the data on the DVD rewriteable disks quickly.

**11-15. Setup
Quick Erase**

Press **ENT** to enter the next figure. Use **▲▼** to confirm Yes or No.

**All data will be
lost, erase? Yes**

After confirming Yes and pressing **ENT**, LCD will show the message as follows.

**Erasing disc
00:00 (Quick)**

When erasing finishes, LCD will show the results as follows.

**Quick Erase
OK:03 Fail:00**

3.11.16 Full Erase

On the above figure, press **ESC** and **▼** to enter the following figure. Full Erase is to erase the data on the DVD rewriteable disks completely. Compared with Quick Erase, Full Erase takes longer time to do the job.

**11-16. Setup
Full Erase**

Press **ENT** to enter the next figure. Use **▲▼** to confirm Yes or No.

**All data will be
lost, erase? Yes**

After confirming Yes and pressing **ENT**, LCD will show the message as follows.

**Erasing disc
00:00 (Full)**

When erasing finishes, LCD will show the results as follows.

**Full Erase
OK:03 Fail:00**

3.12 Adv Setup

Function 12 Adv Setup lets you change the system configuration. This function includes 13 parts. They are UnderRun Protect, Overburn, Read Error Skip, Format HDD, Verify HDD, Burn-in, Update Firmware, Compare Firmware, H/W Diagnostic, Load Default, CD+G, ISRC and Switch Link-Host.

On the above figure press **ESC** to return to Function 11. Then, press **ESC** for 2 seconds to enter Function 12 as the following figure shows.

12. Adv Setup

3.12.1 UnderRun Protect

On the above figure press **ENT**, and you will enter the following figure. UnderRun Protect lets you control On and Off of Buffer Under Run Protection such as Burn Proof, SafeBurn, JustLink, Seamless Link, etc.

**12-01. Adv Setup
UnderRun Protect**

Press **ENT** to enter the following figure. The default is On. Press ▼ to select Off.

UnderRun Protect
On

3.12.2 Overburn

On the above figure, press **ESC** and ▼ to enter the following figure. Overburn lets you decide whether to copy beyond the limit of the CD or not.

12-02. Adv Setup
Overburn

Press **ENT** to enter the following figure. The default is Off. Press ▼ to select On.

Overburn
Off

3.12.3 Read Error Skip

On the above figure, press **ESC** and ▼ to enter the following figure. Read Error Skip is to neglect any error that occurs during copying. Under normal circumstances, when an error occurs during copying, a message will appear on LCD. Yet, you can use Read Error Skip to copy some defective DVDs.

12-03. Adv Setup
Read Error Skip

Press **ENT** to enter the following figure. The default is Off. Press ▼ to select On.

Read Error Skip
Off

3.12.4 Format HDD

On the above figure, press **ESC** and ▼ to enter the following figure. Format HDD is to partition the hard disk. But before formatting, all data on the hard disk will be deleted.

**12-04. Adv Setup
Format HDD**

Press **ENT** to enter the next figure. Use ▲▼ to confirm Yes or No.

**All data will be
lost, format? Yes**

If your copy smart plus doesn't connect with a hard disk, LCD will show the message as follows.

There is no HDD!

3.12.5 Verify HDD

On the above figure press **ESC** to return to Function 12, and then select part 5 Verify HDD as the following figure shows. Verify HDD is to verify if the hard disk or any of its partitions can work well.

**12-05. Adv Setup
Verify HDD**

Press **ENT** to enter the next figure. Use ▲▼ to confirm Disk or Parti.

**Verify Disk or
Partition? Disk**

Press **ENT** to verify. After verification LCD will show the results as follows.

**Verify Hard Disk
OK!**

3.12.6 Burn-in

On the above figure, press **ESC** and **▼** to enter the following figure. Burn-in is to simulate the copying progress many times. The time can be from 1 to 1000. After each cycle of simulation, the DVDs on the DVD writers will eject automatically and recede for the next bout of simulation.

12-06. Adv Setup
Burn-in

Press **ENT** to enter the next figure. Test is simply a simulation.

Burn-in
Test

Press **ENT** and use **▲▼** to select the time of simulation such as 1, 2, 3...1000 or Run Continuous. The figure below shows Run Continuous.

Sel burn-in num:
Run Continuous

Press **ESC**, **ENT**, **▼** to select Erase & Copy as the following figure shows. Erase & Copy is to erase and write repeatedly. It is only for DVD rewriteable disks.

Burn-in
Erase&Copy

Press **ENT** and use **▲▼** to select the time of simulation such as 1, 2, 3...1000 or Run Continuous. The figure below shows Run Continuous.

Sel burn-in num:
Run Continuous

3.12.7 Update Firmware

On the above figure, press **ESC** and ▼ to enter the following figure. Update Firmware is to update firmware to the latest version. But you should get the version first.

**12-07. Adv Setup
Update Firmware**

You can get the newest firmware version from ACARD by e-mail, or download it directly from the web site: <http://www.acard.com> Then, unzip the file "cdxxx.bin" and copy it into a blank DVD. After placing the DVD on the DVD-ROM, press **ENT**. The system will begin searching the new firmware and show the message on LCD as follows after it finds the new firmware. Then press **ENT** to update.

**Searching F/W---
XXX/XXXXX**

3.12.8 Compare Firmware

On the above figure, press **ESC** and ▼ to enter the following figure. Compare Firmware is to compare the current firmware version and the newly downloaded version. It can prove if the downloaded version is the newest one.

**12-08. Adv Setup
Compare Firmware**

3.12.9 H/W Diagnostic

Press **ESC** and ▼ to enter the next figure. H/W Diagnostic is to test the system.

**12-09. Adv Setup
H/W Diagnostic**

Press **ENT** to enter the next figure. Follow the instructions on LCD to do the button test. After that, the system will do the self-test of SDRAM, the hardware connection test and flash test. All test results will be shown on LCD. It is the easiest way to know if the system can work well.

**↑↓ Enter ESC
Hold ESC to exit**

When the whole process finishes, LCD will show the message as follows.



Test finished

3.12.10 Load Default

On the above figure, press **ESC** and **▼** to enter the next figure. Load Default is to make all changed settings recover to defaults.



**12-10. Adv Setup
Load Default**

Press **ENT** to enter the next figure. Use **▲▼** to confirm Yes or No.



**Load Default
Config? Yes**

When default loading finishes, LCD will show the results as follows.



**Load Default
OK**

3.12.11 CD+G

On the above figure, press **ESC** and **▼** to enter the following figure. CD+G is a kind of special copying format. This function supports the special format.



**12-11. Adv Setup
CD+G**

Press **ENT** to enter the next figure. The default is Off. Press **▼** to select On.



**CD+G
Off**

3.12.12 ISRC

On the above figure, press **ESC** and ▼ to enter the following figure. ISRC is a kind of special copying format. This function supports the special format.

A rectangular box containing the text "12-12. Adv Setup" on the top line and "ISRC" on the bottom line.

12-12. Adv Setup
ISRC

Press **ENT** to enter the next figure. The default is Off. Press ▼ to select On.

A rectangular box containing the text "ISRC" on the top line and "Off" on the bottom line.

ISRC
Off

3.12.13 Switch Link-Host

On the above figure, press **ESC** and ▼ to enter the next figure. Switch Link-Host lets you switch to the link-host mode if your 2030DS has connected with a PC.

A rectangular box containing the text "12-13. Adv Setup" on the top line and "Switch Link-Host" on the bottom line.

12-13. Adv Setup
Switch Link-Host

Press **ENT** to enter the next figure.

A rectangular box containing the text "Link-Host Mode" on the top line and "Initializing..." on the bottom line.

Link-Host Mode
Initializing...

Chapter 4 Troubleshooting

4.1 About LCD

After powering on if there is no LCD, please check if the connection of power cord is firm and the environment of power outlet is normal.

4.2 About Error Messages

During Copy, Test, Compare and Verify, etc. if you press **ESC** to abort, an error message will appear on LCD. Abortion may cause the copy smart plus to hang up, therefore you have to power on again.

If reading fails, an error message will appear on LCD. Please get a new source DVD to try again.

If the copy smart plus hasn't detected any device after powering on, an error message will appear on LCD.

4.3 About DVD-ROM/DVD Writers

If a DVD-ROM or DVD writers cannot read, please confirm the format of the source DVD and check if it is damaged.

Use any DVD writer to read the source DVD. If it works, the DVD-ROM is probably defective or not compatible with the source DVD.

Use a fine DVD writer as the data reader, and set the "Read Speed" at minimum.

4.4 About Buttons

If you press any one of the four buttons on the panel, but there is no response, it is perhaps that the button cannot function well. Please inspect the jumper setting.

4.5 About DVD Writer Not Readable

After copying if the DVD writer is not readable, please use Compare to examine, or get another DVD-ROM to test.

4.6 About High Failure Rate

If the failure rate of copying is high, please do the following things to improve.

- Lower the speed of DVD writer
- Inspect if the blank disk's quality is bad.
- Update the firmware.
- Inspect the DVD writer's maximum writing speed. If the speed is over 24X, copy the data to a hard disk first, and then transmit to DVD.

4.7 About Firmware Update

If you cannot update the firmware, please inspect the BIOS program. Perhaps you have downloaded a wrong program, or let a zipped file be written into DVD. The zipped file should be unzipped first.

Failure in firmware update may cause the copy smart plus to fail in booting. Under the circumstances, please return the control board to ACARD for repair.

4.8 About Function 12 and Cancellation

If you want to execute function 12 Advanced Setup, you can press **ESC** for 2 seconds. And during operation if you want to cancel a function like Copy, Test, Verify and so on, you can press **ESC** for 2 seconds, too.

Appendix 1 List of Functions

- 1 Copy
- 2 Test
- 3 Test & Copy
- 4 Verify
- 5 Compare
- 6 Prescan
- 7 Disc Info
- 8 Select Source
- 9 Image (It works only when a hard disk is connected)
 - 9.1 Load
 - 9.2 Delete Image
 - 9.3 Image Info
 - 9.4 Compare Image
 - 9.5 Select Partition (Each partition is 5GB)
 - 9.6 Select Src Drive
- 10 Edit Track (for CD only)
 - 10.1 CD to CD
 - 10.2 CD to HDD (It works only when a hard disk is connected)
 - 10.3 Play Audio Track
 - 10.4 Close Session
- 11 Setup
 - 11.1 Language (English)
 - 11.2 Burn Speed (Default is Maximum)
 - 11.3 Read Speed (Default is Maximum)
 - 11.4 Auto Start Drive (Default is Off)
 - 11.5 Startup Menu (Default is Copy)
 - 11.6 Auto Verify (Default is Off)
 - 11.7 Auto Compare (Default is Off)
 - 11.8 Auto Prescan (Default is Off)
 - 11.9 Eject Disc (Default is Eject Good Only)
 - 11.10 Burn On The Fly (Default is On)
 - 11.11 Burn Mode (Default is DAO)
 - 11.12 Button Sound (Default is On)
 - 11.13 Device Info
 - 11.14 System Info
 - 11.15 Quick Erase
 - 11.16 Quick Erase
- 12 Adv Setup
 - 12.1 UnderRun Protect (Default is On)
 - 12.2 Overburn (Default is Off)
 - 12.3 Read Error Skip (Default is Off)
 - 12.4 Format HDD
 - 12.5 Verify HDD
 - 12.6 Burn-in
 - 12.7 Update Firmware
 - 12.8 Compare Firmware
 - 12.9 H/W Diagnostic
 - 12.10 Load Default
 - 12.11 CD+G (Default is Off)
 - 12.12 ISRC (Default is Off)
 - 12.13 Switch Link-Host

Appendix 2 LCD Messages

1. Normal Conditions:

Initialize SDRAM Initialize the memory of the system.
Detect Drives Detect what drives are connected with the system.
User Abort! Cancel the job during operation.
Analyzing Analyze the source disc.
Source Drive Not Ready Source drive is not ready to read.
Target Drive Not Ready Target drive is not ready to write.
Source Disc Not Ready Source disc is not ready to be read.
Target Disc Not Ready Target disc is not ready to be written into.
Erasing disc The system is erasing the data on the disc.
Fail to get Drive Info! The drive information cannot be obtained.
Fail to get Src Disc Info! The information of source disc cannot be obtained.
Save new config Fail! The new setting of configuration cannot be saved.
Load Default Config? Do you want to load the default settings?
Src&Tgt can't in the same channel......During comparison the source and target discs cannot be in the same channel.
Preparing The system is preparing to record.
Check Target Please WaitThe system is checking the target device.
Audio Disc!!! Can't compare! The system cannot compare the audio discs.
Identical The comparison results are the same.
Read disc errorDuring comparison the disc cannot be read.
Cannot read TOC The system cannot read the contents of disc.
TOC not match The comparison results are not the same.
Source Disc Empty!!! The source disc doesn't contain any data.
Target overflow The target disc hasn't enough capacity to store new data.
Target Disc Not Empty!!! The target disc still has data.
Press a Key to Eject Good Disc ... Press any key to eject the good disc after copying
Press a Key to Eject Fail Disc Press any key to eject the failed disc after copying.
DVD-RW does not Support the Func DVD-RW doesn't support this function.
Hold ESC to exit Press **ESC** for a second to terminate the test.
All data will be lost, erase?All data on the disc will be lost. Confirm the erasing of data.
Erase Finished The erasing of data comes to an end.
No Eraseable Disc in DVD-RW!!The disc on the DVD-RW device is not rewritable.

2. Connecting with a HDD:

HDD not Format!The hard disk hasn't been formatted yet.
Format HDD? Ask if you want to format the hard disk.
All data will be lost, format?All data on the hard disk will be lost. Confirm the formatting of hard disk.
Format HDD OK!The Formatting of hard disk has been completed.
Image load OK The image is successfully loaded from DVD to the hard disk.
Image load FailThe image isn't successfully loaded from DVD to the hard disk.
HDD too small to handle image!The hard disk hasn't enough capacity to store the data image (at least 5Gbytes).
No Valid HDD! The system cannot find a hard disk.
HDD too small The capacity of hard disk is too small.
No Image in Partition xxThere is no data image in partition xx.
Image Exists Overwrite?There is a data image in the current partition. Confirm the overwriting of data.
Delete Image in Partition xx? ...Confirm the deleting of data image in partition xx.
Partition DamageThe partition is damaged.
Verify Disk or Partition? Do you want to verify the hard disk or just a partition?

Verify Hard Disk OK! The hard disk is verified successfully.
Verify Hard Disk Fail! The hard disk is not verified successfully.
Verify Partition Header! Verify the partition header.
Select HD First! Select a formatted hard disk at first.

3. Audio Editing:

Lost selected Tracks? Abort the selected tracks and delete them.
End edit disc and burn? Finish the music disc editing and start to copy.
Continue edit next Disc? Ask if you want to continue the music disc editing.
Target Overflow Re-Select..... The disc capacity is not enough to store the selected tracks. Please select again.
Close all disc's session? Confirm the closing of disc sessions.
Can't edit HDD..... The hard disk cannot be edited as a source audio disc.
NO AUDIO track in this disc..... The source disc has no audio track.
Insert next disc..... Insert the next audio disc.
Sessions were closed already! The disc sessions have already been closed.
Burn or Move to partition? Do you want to directly copy the data into disc or move them to the partition.
Tgt overflow, del last trk? The disc capacity is not enough to store the selected tracks. So, do you want to delete the last track?
Ins empty disc Continue?.. Do you want to insert a blank disc and continue copying?

4. Firmware Update:

Invalid firmware Disc..... The disc doesn't contain a valid firmware.
Updating F/W.....The system is updating the firmware.
Update F/W xxx to yyy? Do you want to update the firmware version from xxx to yyy?
Searching F/W The system is searching for a valid firmware.
Check Sum Error! The updated firmware has errors.
Source can't be Hard Disk!During comparison the source cannot be hard disk.
Last update F/W OK! The firmware is updated successfully.
Last update F/W Fail! The firmware is not updated successfully.
Flash ROM fail! Data cannot be written into Flash ROM.

Technical Support Form
Email: support@caloptic.com
<http://www.caloptic.com>